


3Max

VDSL2 Splitter Quick Installation Guide

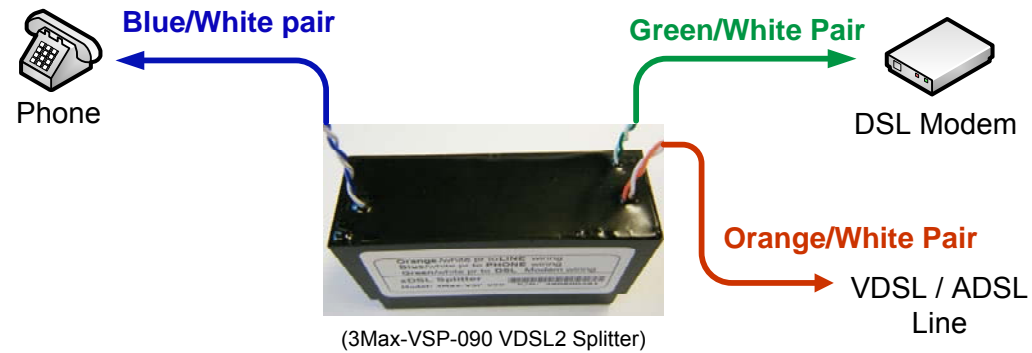

- Find out the location of telephone junction box in the building.
- Identify cables for LINE, PHONE and MODEM.
- Connect **Orange/White** pair cables to the VDSL / ADSL LINE wiring.
- Connect **Blue/White** pair cables to PHONE wiring.
- Connect **Green/White** pair cables to MODEM wiring.

▶ www.3max.co.nz

Copyright © 2010 Infortek Ltd. All rights reserved.